





# Library 518 Technology Instructions

1. Touch the touch screen to turn system on.

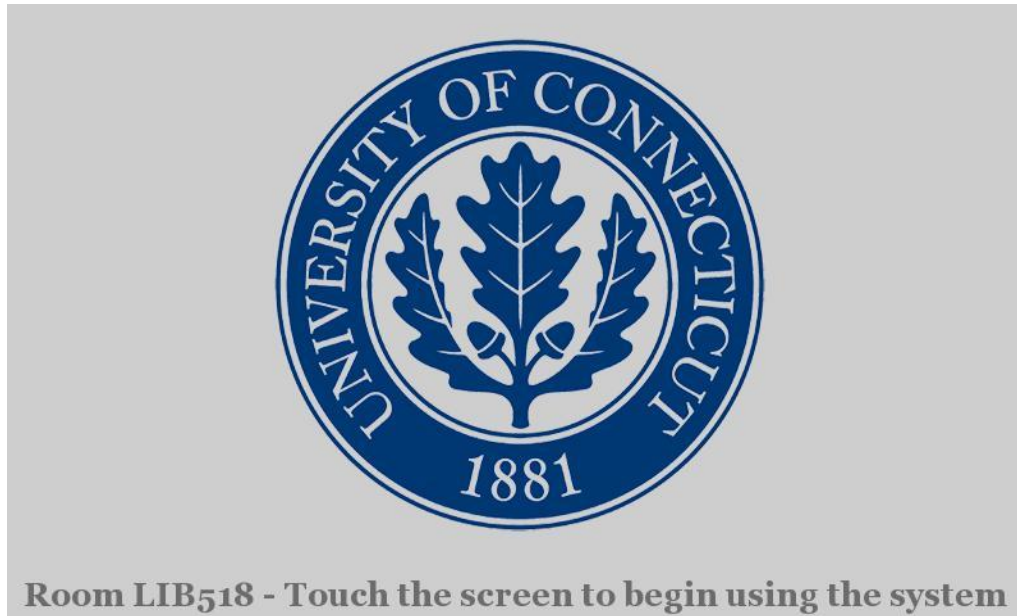

2. Turn on wireless microphone by holding down grey power button located on the top of the microphone until the light turns green. Microphone and Program (DVD/VCR and computer) Volume controls are available on the right.
3. Select desired source on touch screen (this will also turn on the projector)

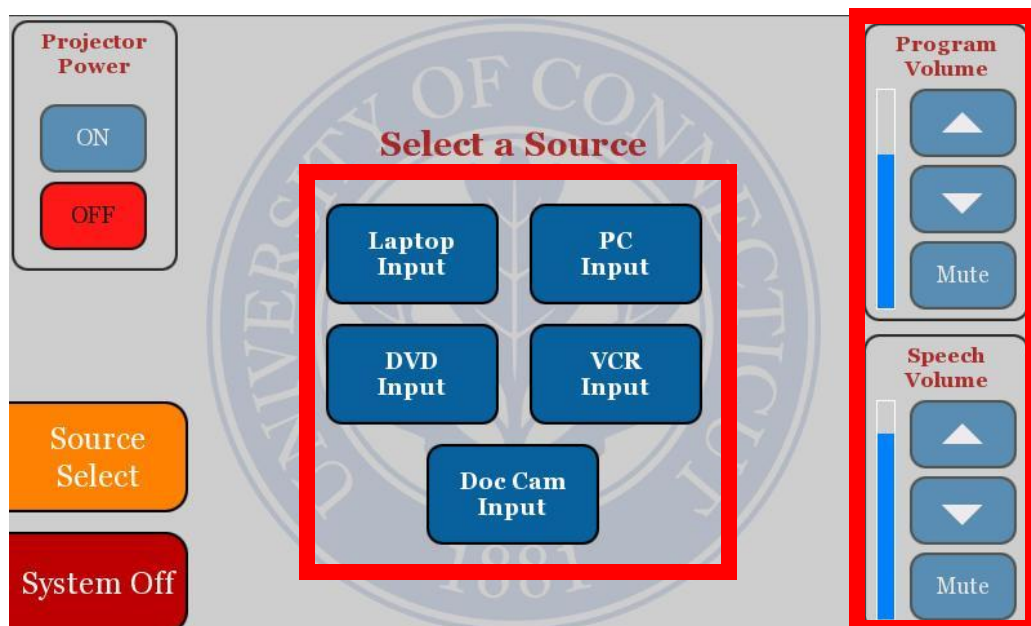



## Library 518 Technology Instructions Cont'd.

4. **FOR PC:** Select PC Input and move the mouse to wakeup computer if the computer monitor has a black background. (Also: make sure monitor is powered on)
5. **FOR DVD:** Select DVD Input and insert DVD and use the controls on the touch screen to operate DVD Player
6. **FOR VCR:** Select VCR Input and insert VHS and use the controls on the touch screen to operate VCR Player
7. **FOR DOCUMENT CAMERA:** Select Laptop/Doc Cam Input then press Power on Document Camera
8. **FOR LAPTOP:** Select Laptop/Doc Cam Input then disconnect VGA cable from Document Camera and connect it to laptop. (*PLEASE CONNECT TO DOC CAM WHEN FINISHED*)
9. **WHEN FINISHED:** Log off computer, turn microphone off by holding down power button until green light goes off, and press System Shutdown on touch screen.

**NOTE: IF PROJECTOR DOES NOT POWER OFF YOU MUST TURN SYSTEM ON AND PRESS PROJECTOR OFF**