

SEAT MICROPHONES

* REFER TO *System Start-Up* IN THIS MANUAL TO TURN ALL FUNCTIONS ON

TO BEGIN USE:

- Locate **SEAT MICROPHONE CONTROL** box located in the corner of the room
 - ◆ *From technology box, can control seat microphones at student desks in room*
- Turn knob on the **SEAT MICROPHONE CONTROL** box to the **ON** position
 - **Microphones at student seats will now be on and functioning and in NORMAL volume mode**
 - ◆ *White knob for classroom microphone is separate from touch screen monitor and must be turned on for desktop student microphones to be activated*
- ☠ **Touch Screen DOES NOT need to be activated for SEAT MICROPHONES to work!!!**
 - ◆ *Microphones are located on various student desktops throughout classroom; Noise at a specific desk will activate the microphone closest to that desk*
- ☠ **Seat Microphones activate at desks when noise is picked up from a particular microphone!!!**

TO CONTROL MICROPHONE VOLUME:

- To raise volume, turn white knob in corner of room on technology box to **BOOST** position
 - ◆ *ON and BOOST are the only volume settings for the classroom student desktop microphones; there is no up and down volume control*

× WHEN DONE WITH USE:

- Return knob on **SEAT MIC CONTROL** box to the **OFF** position
 - ◆ *Seat Microphones will now be off*
- * **WHEN EXPERIENCING TECHNICAL DIFFICULTIES WITH SYSTEM, CONTACT DEAN'S OFFICE; CRIMSON TECH HANDLES ALL REPAIRS OF THE SYSTEM!!!**

☠ **MUST turn off SEAT MIC CONTROL box when finished with classroom!**