

# ☰ □ ☷ LARGE SPEAKERS 🎵

**\* REFER TO *System Start-Up* IN THIS MANUAL TO TURN ALL FUNCTIONS ON**

## ⚡ TO BEGIN USE:

- ➔ Press **SYSTEM POWER ON** on touch screen monitor to turn all functions on
- ➔ Press **SOURCE SELECT** on touch screen and choose a function from SOURCE menu
  - ◆ *From SOURCE menu, can operate DOC CAM, DESKTOP COMP, LAPTOP COMP, VCR, CD/DVD, SLIDES, TUNER, and AUX PLATE*
- ➔ Press yellow buttons **SEND IMAGE TO PROJECTOR** and/or **SEND IMAGE TO PLASMA** on touch screen to show laptop computer function image on projector and/or plasmas and to hear laptop sound
  - Yellow buttons **SEND IMAGE TO PROJECTOR** and **SEND IMAGE TO PLASMAS** appears after choosing function from the menu
  - Projection screen will come down automatically when **SEND IMAGE TO PROJECTOR** is pressed; Projector may take a few minutes to warm-up and load
    - ◆ *Can show image on PLASMAS and/or PROJECTOR screen simultaneously by pressing both*

## 🔊 TO CONTROL FUNCTION VOLUME:

- ➔ Press **PROGRAM VOLUME** △▽ arrows on touch screen; △ to raise, ▽ to lower

## 🔊 TO CONTROL MICROPHONE VOLUME: (WIRELESS AND PLUG-IN)

- ➔ Press **MIC VOLUME** △▽ arrows on touch screen; △ to raise, ▽ to lower

## 👂 TO HEAR FUNCTION SOUND:

- ➔ Re-send function to the **PLASMAS** and/or **PROJECTOR** on touch screen to hear sound; Press **SOURCE SELECT** on touch screen, then choose the function on the menu you want sound to accompany, then press **SEND IMAGE TO PROJECTOR** and **SEND IMAGE TO PLASMAS** again
  - The system will only play the sound of the last function chosen
    - ◆ *Ex: VCR sent to PLASMAS/PROJECTOR, then another function is chosen, must re-send VCR*
- ☠ **MUST have last function sent to PROJECTOR/ PLASMAS be the sound function to hear sound!!!**

## 🎵 TO OPERATE CD FUNCTION:

- ➔ Press **SOURCE SELECT** on touch screen and choose **CD/DVD** function from the SOURCE menu
- ➔ Press yellow buttons **SEND IMAGE TO PROJECTOR** and/or **SEND IMAGE TO PLASMA** on touch screen to hear CD sound
  - Yellow buttons **SEND IMAGE TO PROJECTOR** and **SEND IMAGE TO PLASMAS** appears after choosing CD function from the menu
- ☠ **MUST send CD function to PROJECTOR/ PLASMAS for sound even though CD not a visual!!!**

## ✕ WHEN DONE WITH USE:

**\* REFER TO *System Shutdown* IN THIS MANUAL TO TURN ALL FUNCTIONS OFF**

**☠ MUST Shut Down system when finished with a classroom!**