

# 🗣️ WIRELESS MICROPHONES 🗣️

**\* REFER TO *System Start-Up* IN THIS MANUAL TO TURN ALL FUNCTIONS ON**

## 🗣️ TO BEGIN USE:

- ➔ Press **SYSTEM POWER ON** on touch screen monitor to turn all functions on
- ☠️ **MUST press SYSTEM POWER ON for microphone sound to be heard!!!**
- ➔ Open Cabinet/ Drawer 2; retrieve black microphone bag, and take microphone out of bag
  - ◆ *Microphone includes pack with attachable clip and wire with clip on microphone piece*
- ➔ Attach pack clip to pants or hold pack with hands and attach clip-on microphone piece to clothing near mouth (or another audio source in lieu of mouth)
- ➔ Turn small lever on the microphone pack to the **ON** position
  - **Battery light should become green; Microphone will now be on and functioning**
    - ◆ *If battery light not on, replace battery with another from the bag*
- ☠️ **Battery light must be green for microphone to have power and work!!!**

## 🗣️ TO CONTROL MICROPHONE VOLUME:

- ➔ Press **MIC VOLUME**  $\Delta$   $\nabla$  arrows on touch screen;  $\Delta$  to raise,  $\nabla$  to lower

## ✕ WHEN DONE WITH USE:

- ➔ Turn lever on microphone pack to the **OFF** position
- ➔ Place microphone bag in Cabinet/ Drawer 2 and lock Cabinet  $\rightarrow$
- \* REFER TO *System Shutdown* IN THIS MANUAL TO TURN ALL FUNCTIONS OFF**

**☠️ MUST Shut Down system when finished with a classroom!**