



☐ TELEVISION AND VCR CART

* FOR VCR USE: CH. 4 AND TV SETTING

☐ TO BEGIN USE:

- Move television and VCR on wheeled cart to desired position in room
- Locate outlet closest to desired position of television cart
- Plug cord for cart into outlet
 - Only one cord will need to be plugged into the outlet
 - ◆ Master cord connects both TV and VCR into one outlet plug through technology cart
- Press **POWER** button on television to turn on
- Press **POWER** button on VCR to turn on
 - ◆ Most televisions on campus receive no signals and are for the sole purpose of VCR use only
- Place VHS tape into VCR slot  → 
- Press **CHANNEL +** and **CHANNEL -** on the television to adjust channel to **4**
- ☠ **MUST have channel on 4 for VCR to play on television screen!!!**
- Press **PLAY ▶** on VCR to start tape play
 - Video will begin to play on screen
 - ◆ If tape still does not play, the television settings must be changed
- ☠ **MUST adjust settings on television for VHS tape to play!!!**

* REFER TO NEXT SET OF INSTRUCTIONS TO CHANGE TELEVISION SETTINGS

☐ TO CHANGE TELEVISION SETTINGS:

- ◆ Change settings if tape does not play on screen after first set of instructions completed
- Press **TV/CATV** button on television
 - Current television setting will appear on screen
- Press **TV/CATV** button several times until the word **TV** is displayed on screen
 - Tape should now be playing on screen
 - ◆ TV displayed on the screen means the television is in TV mode

TO CONTROL TAPE PLAY:

- Press **PLAY ▶**, **STOP ■/ EJECT ▲**, **PAUSE ||**, **REW ◀**, and **FF ▶▶** buttons on the VCR to control the video play

TO CONTROL TELEVISION VOLUME:

- Press **VOLUME +** and **VOLUME -** on television to adjust volume

× WHEN DONE WITH USE:

- Press **STOP ■/ EJECT ▲** button twice on VCR to stop tape play and eject tape
- Press **POWER** on television to turn off
- Press **POWER** on VCR to turn off

☠ **MUST turn power off on TV and VCR when finished with a classroom!**