



TELEVISION AND VCR

*** FOR VCR USE: CH. 4**

TO BEGIN USE:

- Press **POWER** button on television to turn on
- Press **POWER** button on VCR to turn on
 - ◆ *Most televisions on campus receive no signals and are for the sole purpose of VCR use only*
- Place VHS tape into VCR slot  → 
- Press **CHANNEL +** and **CHANNEL -** on the television to adjust channel to **4**
- ⚠ **MUST have channel on 4 for VCR to play on television screen!!!**
- Press **PLAY ▶** on VCR to start tape play
 - Video will begin to play on screen

TO CONTROL TAPE PLAY:

- Press **PLAY ▶**, **STOP ■**, **EJECT ▲**, **PAUSE ||**, **REW ◀**, and **FF ▶▶** buttons on the VCR to control the video play

TO CONTROL TELEVISION VOLUME:

- Press **VOLUME +** and **VOLUME -** on television to adjust volume

× WHEN DONE WITH USE:

- Press **STOP ■** and **EJECT ▲** buttons on VCR to stop tape play and eject tape
- Press **POWER** on television to turn off
- Press **POWER** on VCR to turn off

⚠ MUST turn power off on TV and VCR when finished with a classroom!