

TELEVISION AND VCR

*** FOR VCR USE: TV ON CH. 2 AND VIDEO 1 SETTING**



*** REMOTE COMPATIBLE WITH TV/ VCR AVAILABLE AT LIBRARY CIRCULATION DESK**

TO BEGIN USE:

→ Press **POWER** button on television to turn on

→ Press **POWER** button on VCR to turn on

◆ *Most televisions on campus receive no signals and are for the sole purpose of VCR use only*

→ Place VHS tape into VCR slot  → 

→ Press **CHANNEL +** and **CHANNEL -** on the television to adjust channel to **2**

⚠ **MUST have channel on 2 for VCR to play on television screen!!!**

→ Press **PLAY ▶** on VCR to start tape play

➤ **Video will begin to play on screen**

◆ *If tape still does not play, the television settings must be changed*

⚠ **MUST adjust settings on television for VHS tape to play!!!**

*** REFER TO NEXT SET OF INSTRUCTIONS TO CHANGE TELEVISION SETTINGS**

TO CHANGE TELEVISION SETTINGS:

◆ *Change settings if tape does not play on screen after first set of instructions completed*

→ Press **MENU** button on television

➤ **Menu will appear on screen**

→ Press **MENU** button several times until **TV/VIDEO** is highlighted on the screen

→ Press **CHANNEL +** button on television continuously until **VIDEO 1** setting is selected

➤ **Tape should now be playing on screen**

◆ *TV displayed on the screen means the television is in TV mode*

TO CONTROL TAPE PLAY:

→ Press **PLAY ▶**, **STOP ■/ EJECT ⬆**, **PAUSE ||**, **REW ⬅**, and **FF ➡** buttons on the VCR to control the video play

TO CONTROL TELEVISION VOLUME:

→ Press **VOLUME +** and **VOLUME -** on television to adjust volume

× WHEN DONE WITH USE:

→ Press **STOP ■/ EJECT ⬆** button twice on VCR to stop tape play and eject tape

→ Press **POWER** on television to turn off

→ Press **POWER** on VCR to turn off