



 


## TELEVISION AND VCR/CD/DVD

- \* **FOR VCR/CD/DVD USE: TV ON ANY CHANNEL AND VIDEO 1 SETTING**
- \* **REMOTE COMPATIBLE WITH TV/VCR/DVD AVAILABLE AT LIBRARY CIRCULATION DESK**




### **TO BEGIN USE:**

- Press **POWER** button on television to turn on
  - ◆ *Most televisions on campus receive no signals and are for the sole purpose of VCR/DVD use only*
- Push the **POWER** button on VCR/CD/DVD combo machine to turn on
- Adjust television settings to **VIDEO 1** setting to play VCR/CD/DVD (tv can be on ANY channel)
- ☠ **MUST have television set to VIDEO 1 mode for VCR/CD/DVD to play on television screen!!!**
- \* **REFER TO INSTRUCTIONS ON NEXT PAGE TO ADJUST TELEVISION SETTINGS**

### **FOR CD-DVD USE:**





- Open CD/DVD drive using **OPEN/CLOSE**  button and disk drive tray will slide out
- Place CD or DVD into disk drive  → ; Press **OPEN/CLOSE**  button again to close the drive tray
- Press **VCR/DVD** button on machine repeatedly to choose the CD/DVD function or place disk into slot
  - **DVD indicator will light up on right side of machine when CD/DVD function is chosen**
  - ◆ *Machine will recognize CD/DVD and set itself to DVD setting when disk is placed in disk drive*
- Press **PLAY**  on VCR/CD/DVD player to start CD or DVD play
  - **DVD will begin to play on screen or CD sound will be heard**
  - ◆ *If CD/DVD still does not play, the television settings must be changed*
- ☠ **MUST adjust settings on television for VCR/CD/DVD to play; TV must be in VIDEO 1 mode!!!**
- \* **REFER TO INSTRUCTIONS ON NEXT PAGE TO ADJUST TELEVISION SETTINGS**

### **FOR VCR USE:**

- Place VHS tape into VCR slot  → 
- Press **VCR/DVD** button repeatedly to choose the VCR function or place VHS into slot
  - **VCR indicator will light up on left side of machine when VCR function is chosen**
  - ◆ *Machine will recognize VHS and set itself to VCR setting when disk placed in slot*
- Press **PLAY**  on VCR/CD/DVD to start tape play
  - **Video will begin to play on screen**
  - ◆ *If VCR still does not play, the television settings must be changed*
- ☠ **MUST adjust settings on television for VCR/CD/DVD to play; TV must be in VIDEO 1 mode!!!**
- \* **REFER TO INSTRUCTIONS ON NEXT PAGE TO ADJUST TELEVISION SETTINGS**

\* **TELEVISION, VCR/CD/DVD FUNCTIONS CONTINUE ON NEXT PAGE**

### × **WHEN DONE WITH USE:**

- Press **STOP**  and **EJECT**  button to stop tape play and eject tape; Press **STOP**  and **OPEN/CLOSE**  to stop CD/DVD play and remove disc

## TV AND VCR/DVD FUNCTIONS CONTINUED

- \* TELEVISION, VCR/CD/DVD INSTRUCTIONS CONTINUED FROM PREVIOUS PAGE
- \* FOR VCR/CD/DVD USE: TV ON ANY CHANNEL AND VIDEO 1 SETTING
- \* REMOTE COMPATIBLE WITH TV/CD/DVD AVAILABLE AT LIBRARY CIRCULATION DESK

### TO CHANGE TELEVISION SETTINGS:

◆ *Change settings if VHS/CD/DVD does not play after previous instructions are completed*

- Press **MENU** on television
  - **Menu will appear on screen**
- Press **MENU** button several times until **TV/VIDEO** is highlighted on the screen
- Press **CHANNEL +** button on television continuously until **VIDEO 1** setting is selected
  - **Tape or DVD should now be playing on screen or CD will be heard**
  - ◆ **VIDEO 1 displayed on the screen means the television is in VIDEO 1 mode**

### TO CONTROL CD/DVD PLAY:

- Press **PLAY ▶**, **STOP ■**, and **OPEN/CLOSE ⏏** on the CD/DVD player to control the play
- Press **REW ◀** once to rewind the disc; Repeat pressing to speed up rewinding function; To stop rewinding and begin playing CD/DVD again, press **PLAY ▶**
- Press **FF ▶▶** once to rewind the disc; Repeat pressing to speed up the fast-forwarding function; To stop fast-forwarding and begin playing CD/DVD again, press **PLAY ▶**

### TO CONTROL TAPE PLAY:

- Press **PLAY ▶**, **STOP ■** and **EJECT ⏏** buttons on the VCR to control the video play
- Press **REW ◀** once to rewind the VHS tape; Repeat pressing to speed up rewinding function; To stop rewinding and begin playing VHS tape again, press **PLAY ▶**
- Press **FF ▶▶** once to rewind the VHS tape; Repeat pressing to speed up the fast-forwarding function; To stop fast-forwarding and begin playing VHS tape again, press **PLAY ▶**

### TO CONTROL TELEVISION VOLUME:

- Press **VOLUME +** and **VOLUME -** on television to adjust volume of VHS, CD, or DVD

### × WHEN DONE WITH USE:

- Press **STOP ■** and **EJECT ⏏** button to stop tape play and eject tape; Press **STOP ■** and **OPEN/CLOSE ⏏** to stop CD/DVD play and remove disc
- Press **POWER** on television to turn off; Press **POWER** on VCR/CD/DVD to turn off

 **MUST turn power off on TV and VCR when finished with a classroom!**