

☐ TELEVISION AND VCR 📺

*** FOR VCR USE: TV ON ANY CHANNEL AND VIDEO 1 SETTING**

*** REMOTE COMPATIBLE WITH TV/ VCR AVAILABLE AT LIBRARY CIRCULATION DESK**

☐ 📺 TO BEGIN USE:

- ➔ Press **POWER** button on television to turn on
- ➔ Press **POWER** button on VCR to turn on
 - ◆ *Most televisions on campus receive no signals and are for the sole purpose of VCR use only*
- ➔ Place VHS tape into VCR slot 📺 → ☐
- ➔ Press **CHANNEL +** and **CHANNEL -** on the television to adjust channel
- ⚠ **Television can be on any channel for video to play; television settings must be adjusted!!!**
- ➔ Press **PLAY ▶** on VCR to start tape play
 - **Video will begin to play on screen**
 - ◆ *If tape still does not play, the television settings must be changed*
- ⚠ **MUST adjust settings on television for VHS tape to play!!!**

*** REFER TO NEXT SET OF INSTRUCTIONS TO CHANGE TELEVISION SETTINGS**

☐ TO CHANGE TELEVISION SETTINGS:

- ◆ *Change settings if tape does not play on screen after first set of instructions completed*
- ➔ Press **MENU** on television
 - **Menu will appear on screen**
- ➔ Press **MENU** button several times until **TV/VIDEO** is highlighted on the screen
- ➔ Press **CHANNEL +** button on television continuously until **VIDEO 1** setting is selected
 - **Tape should now be playing on screen**
 - ◆ **VIDEO 1 displayed on the screen means the television is in VIDEO 1 mode**

📺 TO CONTROL TAPE PLAY:

- ➔ Press **PLAY ▶**, **STOP ■/ EJECT ⬆**, **PAUSE ||**, **REW ⏪**, and **FF ▶▶** buttons on the VCR to control the video play

🔊 TO CONTROL TELEVISION VOLUME:

- ➔ Press **VOLUME +** and **VOLUME -** on television to adjust volume

⌘ WHEN DONE WITH USE:

- ➔ Press **STOP ■/ EJECT ⬆** button twice on VCR to stop tape play and eject tape
- ➔ Press **POWER** on television to turn off
- ➔ Press **POWER** on VCR to turn off

⚠ MUST turn power off on TV and VCR when finished with a classroom!