

# TELEVISION/ VCR




## NEW MODEL PANASONIC TV/VCR'S

### \* INSTRUCTIONS FOR PANASONIC NEW MODEL TV/VCR'S

◆ Includes carrels: 4-1, 4-2, 4-3, 4-4, 4-6, 4-7, 4-10, 4-11, 4-13, 4-14, 4-15, 4-17

### \* HEADPHONES FOR QUIET VIEWING COMPATIBLE WITH TV/ VCR AVAILABLE AT LIBRARY CIRCULATION DESK

#### TO BEGIN USE:

- ➔ Press **POWER** button on TV/VCR machine to turn on
  - ◆ *Television/VCR machines receive no signals and are for the sole purpose of VCR use only*
- ➔ Place VHS tape into VCR slot  ➔ 
- ➔ Press **CHANNEL ▲** and **CHANNEL ▼** on the television to adjust channel
- ⚠ **Television can be on any channel for video to play!!!**
- ➔ Plug headphones into port labeled with headphones  symbol
  - ◆ *Headphones are used in the library carrels for noise control in the library*
  - ◆ *Headphones compatible with TV/ VCR available at Library circulation desk*
- ⚠ **MUST use headphones in carrels for noise control in the library!!!**
- ➔ Press **PLAY ▶** on VCR to start tape play
  - *Video will begin to play on screen*

#### TO CONTROL TAPE PLAY:

- ➔ Press **PLAY ▶**, **STOP ■/ EJECT ▲**, **PAUSE ||**, **REW◀**, and **FF ▶▶** buttons on the TV/VCR to control the video play

#### TO CONTROL TELEVISION VOLUME:

- ➔ Press **VOLUME +** and **VOLUME -** on TV/VCR to adjust volume

#### × WHEN DONE WITH USE:

- ➔ Press **STOP ■/ EJECT ▲** button twice on TV/VCR to stop tape play and eject tape
- ➔ Press **POWER** on TV/VCR to turn off

**⚠ MUST turn power off TV/VCR when finished with carrel!**