

☐ TELEVISION / CD/ DVD 📀

CARREL 4-5

* INSTRUCTIONS FOR TV/CD/DVD

◆ Includes carrel: 4-5

* HEADPHONES FOR QUIET VIEWING COMPATIBLE WITH TV/CD/DVD AVAILABLE AT LIBRARY CIRCULATION DESK

☐ 📀 TO BEGIN USE:

- ➔ Press **POWER** button on TV/CD/DVD to turn on
- ➔ Open CD/DVD drive using **OPEN/CLOSE** ⬆ button
- ➔ Place CD or DVD into drive; Press **OPEN/CLOSE** ⬆ button again to close drive
- ➔ Press **CHANNEL ▲** and **CHANNEL ▼** on the television to adjust channel
- ☠ **Television can be on any channel for video to play!!!**
- ➔ Plug headphones into port labeled with headphones 🎧 symbol
 - ◆ Headphones are used in the library carrels for noise control in the library
 - ◆ Headphones compatible with TV/ VCR available at Library circulation desk
- ☠ **MUST use headphones in carrels for noise control in the library!!!**
- ➔ Press **PLAY ▶** on TV/CD/DVD player to start CD or DVD play
 - DVD will begin to play on screen or CD sound will be heard
 - ◆ Once CD/DVD has begun to play, **DO NOT** press **CHANNEL ▲** and **CHANNEL ▼** buttons on TV/CD/DVD or CD/DVD will stop play; Press **PLAY ▶** to re-start disk or **OPEN/CLOSE** ⬆ button to re-load disk and start play from menu
- ☠ **DO NOT press CHANNEL ▲ ▼ buttons on TV once CD/DVD has begun to play!!!**
- ➔ To resume disk play if channel buttons pressed during use, press **PLAY ▶** to re-start disk or **OPEN/CLOSE** ⬆ button to re-load disk and start play from menu

📀 TO CONTROL TV/CD/DVD PLAY:

- ➔ Press **PLAY ▶**, **PAUSE ||**, **SKIP ▶▶**, **SKIP ◀◀**, and **OPEN/CLOSE** ⬆ buttons on the TV/CD/DVD player to control the video play

🔊 TO CONTROL TELEVISION VOLUME:

- ➔ Press **VOLUME +** and **VOLUME -** on television to adjust volume

× WHEN DONE WITH USE:

- ➔ Press **CHANNEL ▲** or **CHANNEL ▼** on CD/DVD to stop disc play and press **OPEN/CLOSE** ⬆ button to eject disc
- ➔ Press **POWER** on TV/CD/DVD to turn off

☠ **MUST turn power off TV/CD/DVD when finished with carrel!**