

☐ TELEVISION AND VCR 📺

*** FOR VCR USE: TV ON CH. 3 AND TV SETTING**

☐ 📺 TO BEGIN USE:

- ➔ Press **POWER** button on television to turn on
- ➔ Press **POWER** button on VCR to turn on
 - ◆ *Most televisions on campus receive no signals and are for the sole purpose of VCR use only*
- ➔ Place VHS tape into VCR slot 📺 → 📀
- ➔ Press **CHANNEL +** and **CHANNEL -** on the television to adjust channel to **3**
- ☠ **MUST have channel on 4 for VCR to play on television screen!!!**
- ➔ Press **PLAY ▶** on VCR to start tape play
 - **Video will begin to play on screen**
 - ◆ *If tape still does not play, the television settings must be changed*
- ☠ **MUST adjust settings on television for VHS tape to play!!!**

*** REFER TO NEXT SET OF INSTRUCTIONS TO CHANGE TELEVISION SETTINGS**

☐ TO CHANGE TELEVISION SETTINGS:

- ◆ *Change settings if tape does not play on screen after first set of instructions completed*
- ➔ Press **MENU** on television
 - **Menu will appear on screen**
- ➔ Press **MENU** button several times until **TV/VIDEO** is highlighted on the screen
- ➔ Press **CHANNEL +** button until **VIDEO 1** is seen on screen; Press **CHANNEL +** again until **VIDEO 2** is seen on screen; Press **CHANNEL +** a third time; This is **TV** mode, where no mode will be displayed on screen indicating setting
 - **Tape should now be playing on screen**
 - ◆ **VIDEO 1 and VIDEO 2 displayed on the screen means the television is in VIDEO 1 OR VIDEO 2 mode, but it will not display a setting when it is in TV mode**
 - ◆ *When no mode is displayed on screen, television is in TV mode*

📺 TO CONTROL TAPE PLAY:

- ➔ Press **PLAY ▶**, **STOP ■**, **EJECT ⬆**, **PAUSE ||**, **REW ⏪**, and **FF ⏩** buttons on the VCR to control the video play

🔊 TO CONTROL TELEVISION VOLUME:

- ➔ Press **VOLUME +** and **VOLUME -** on television to adjust volume

✕ WHEN DONE WITH USE:

- ➔ Press **STOP ■** and **EJECT ⬆** buttons on VCR to stop tape play and eject tape
- ➔ Press **POWER** on television to turn off
- ➔ Press **POWER** on VCR to turn off

☠ MUST turn power off on TV and VCR when finished with a classroom!