



TELEVISION AND VCR CART

*** FOR VCR USE: TV ON ANY CHANNEL AND VIDEO 1 SETTING**

TO BEGIN USE:

- Move television and VCR on wheeled cart to desired position in classroom
- Locate outlet in courtroom closest to desired position of television cart
 - ◆ *Outlets in courtroom are located in floor in technology boxes (under silver plates) scattered throughout courtroom front*
- Plug cord for cart into outlet
 - **Only one cord will need to be plugged into the outlet**
 - ◆ *Master cord connects both TV and VCR into one outlet plug through technology cart*
- Press **POWER** button on television to turn on
- Press **POWER** button on VCR to turn on
 - ◆ *Most televisions on campus receive no signals and are for the sole purpose of VCR use only*
- Place VHS tape into VCR slot  → 
- Press **CHANNEL +** and **CHANNEL -** on the television to adjust channel
- ⚠ **Television can be on any channel for video to play; television settings must be adjusted!!!**
- Press **PLAY ▶** on VCR to start tape play
 - **Video will begin to play on screen**
 - ◆ *If tape still does not play, the television settings must be changed*
- ⚠ **MUST adjust settings on television for VHS tape to play!!!**

*** REFER TO NEXT SET OF INSTRUCTIONS TO CHANGE TELEVISION SETTINGS**

TO CHANGE TELEVISION SETTINGS:

- ◆ *Change settings if tape does not play on screen after first set of instructions completed*
- Press **MENU** on television
 - **Menu will appear on screen**
- Press **MENU** button several times until **TV/VIDEO** is highlighted on the screen
- Press **CHANNEL +** button on television continuously until **VIDEO 1** setting is selected
 - **Tape should now be playing on screen**
 - ◆ *VIDEO 1 displayed on the screen means the television is in VIDEO 1 mode*

TO CONTROL TAPE PLAY:

- Press **PLAY ▶**, **STOP ■/EJECT ▲**, **PAUSE ||**, **REW ◀**, and **FF ▶▶** buttons on the VCR to control the video play

TO CONTROL TELEVISION VOLUME:

- Press **VOLUME +** and **VOLUME -** on television to adjust volume

× WHEN DONE WITH USE:

- Press **STOP ■/EJECT ▲** button twice on VCR to stop tape play and eject tape
- Press **POWER** on television to turn off
- Press **POWER** on VCR to turn off

⚠ MUST turn power off on TV and VCR when finished with a classroom!