



# VCR WITH SCREEN PROJECTOR

## **TO BEGIN USE:**

- Push red **MASTER SYSTEM POWER** knob on black media shelf to **ON** position to turn equipment on
- ☠ **MUST turn MASTER SYSTEM POWER on for any other functions to work!!!**
  - **VCR and Master Volume should now be on**
- If **VCR POWER** and **MASTER VOLUME POWER** is off, push **MASTER VOLUME POWER** button on shelf down until it clicks down into the **ON** position; press **POWER** on VCR
  - ◆ *For **MASTER VOLUME POWER** button, Up position is **OFF**, Down position is **ON***
- ☠ **MASTER VOLUME POWER button should be left on at all times!!!**
- Press **VID 1** (marked with **VHS** label) on media shelf on “EXTRON” machine to chose VCR VHS tape to be sent to screen projector
  - **Green VID light will come on**
- Press **POWER** in **PROJECTION CONTROL** display box to turn screen projector **ON**
  - Screen Projector will take a minute to warm up and load; Red light will blink until projector is ready; Blue light will project onto wall when ready
- Place VHS tape into VCR slot  → 
- Press **PLAY** ▶
  - **VCR contents will begin to be projected from screen projector**
  - ◆ *Pull down manual projection screen to show projection image on screen*
- \* **REFER TO MANUAL PROJECTION SCREEN INSTRUCTIONS TO PULL DOWN SCREEN**

## **TO HEAR VCR SOUND:**

- On media shelf, push **POWER** button down on **MASTER VOLUME POWER** in upper right corner of shelf until it clicks down into the **ON** position
  - **Master Volume should always be on when MASTER SYSTEM POWER is turned on**
  - ◆ *For **MASTER VOLUME POWER** button, Up position is **OFF**, Down position is **ON***
- ☠ **MASTER VOLUME POWER button should be left on at all times!!!**

## **TO CONTROL VCR VOLUME:**

- Use **MASTER VOLUME KNOB** on top right of media shelf to control volume; turn to raise and lower

## **TO CONTROL VHS PLAY:**

- On VCR, press **PLAY** ▶, **STOP** ■, **PAUSE** ||, **REW** ◀, and **FF** ▶▶, **STOP** ■, and **EJECT** ▲, to control VCR play
- Press **MUTE** on media shelf to temporarily take image off screen; press **UNMUTE** to return VCR image to screen

## × **WHEN DONE WITH USE:**

- Press **EJECT** ▲ button on VCR and take VHS tape out; Turn **MASTER SYSTEM POWER** knob into **OFF** position; Press **POWER** in **PROJECTION POWER CONTROL** display box to turn projector off
  - Screen Projector will take a minute to shut down; Red light will blink until projector turns off
- ☠ **VCR and MASTER VOLUME power buttons should be left on at all times!!! Will turn off when MASTER SYSTEM POWER turned off!!!**

☠ **MUST turn MASTER SYSTEM POWER knob OFF when finished with classroom!**