

# 👤 WIRELESS MICROPHONE CAPABILITY 👤

## 👤 TO BEGIN USE:

- ➔ Turn switch on black **WIRELESS MICROPHONE SYSTEM CONTROL** box into **ON** position (DOWN)
- ☠ **MUST turn WIRELESS MICROPHONE SYSTEM CONTROL ON for mic sound to be heard!!!**
- ➔ Look at **WIRELESS MICROPHONE CONTROL** box (different from **WIRELESS MICROPHONE SYSTEM CONTROL** box) and confirm **POWER** is **ON** (on top of the **MEDIA SHELF**)
  - **WIRELESS MICROPHONE CONTROL** box should be on; Should be left on for use at all times
    - ◆ **WIRELESS MICROPHONE CONTROL** box is located high on top of media shelf
- ➔ If **WIRELESS MICROPHONE CONTROL** box is not turned on, turn button on back of box into the **ON** position so that red color of button is shown
- ☠ **MUST turn WIRELESS MICROPHONE CONTROL box ON for microphone sound to be heard!!!**
- ➔ Retrieve black microphone bag, and take microphone out of bag
  - ◆ *Microphones not available in room; Must have microphone compatible with room*
  - ◆ *Microphone includes pack with attachable clip and wire with clip on microphone piece*
- ☠ **MUST get wireless microphone for use!!! No microphone available in room!!!**
- ➔ Attach pack clip to pants or hold pack with hands and attach clip-on microphone piece to clothing near mouth (or another audio source in lieu of mouth)
- ➔ Turn small lever on the microphone pack to the **F2** position (frequency on 2)
  - **Battery light should become green; Microphone will now be on and functioning**
    - ◆ *If battery light not on, replace battery*
- ☠ **Microphone must be in F2 (frequency 2) position to be compatible with classroom system!!!**
- ☠ **Battery light must be green for microphone to have power and work!!!**

## 👤 TO CONTROL MICROPHONE VOLUME:

- ➔ Use the **WIRELESS MICROPHONE CONTROL** box located on top of the **MEDIA SHELF** to control volume; turn the **MICROPHONE VOLUME** knob **RIGHT** to turn volume up and **LEFT** to turn volume down

## 👤 TO CONTROL MICROPHONE TONE: (TREBLE AND BASS)

- ➔ Adjust the treble of the microphone sound on the **WIRELESS MICROPHONE CONTROL** box; turn the **MICROPHONE TREBLE** knob **RIGHT** to turn treble up and **LEFT** to turn treble down
- ➔ Adjust the bass of the microphone sound on the **WIRELESS MICROPHONE CONTROL** box; turn the **MICROPHONE BASS** knob **RIGHT** to turn bass up and **LEFT** to turn bass down

## × WHEN DONE WITH USE:

- ➔ Turn lever on microphone pack to the **OFF** position
- ➔ Put microphone back in bag
- ➔ Do not turn the **WIRELESS MICROPHONE CONTROL** box **OFF**; Leave **ON**
- ☠ **DO NOT turn WIRELESS MICROPHONE CONTROL box OFF; Leave ON!!!**

☠ **Leave WIRELESS MIC CONTROL box on when finished with classroom!!!**

☠ **Leave WIRELESS MIC SYSTEM CONTROL box on when finished with classroom!!!**