




TELEVISION AND CD/ DVD

*** FOR CD/DVD USE: TV ON ANY CHANNEL AND VIDEO 1 SETTING**


*** REMOTE COMPATIBLE WITH TV/ CD/DVD AVAILABLE AT LIBRARY CIRCULATION DESK**

TO BEGIN USE:

- Press **POWER** button on television to turn on
- Push **ON/OFF** button on CD/DVD player down until it clicks down into the **ON** position
- Open CD/DVD drive using **OPEN/CLOSE**  button
- Place CD or DVD into drive; Press **OPEN/CLOSE**  button again to close drive
- Press **CHANNEL +** and **CHANNEL -** on the television to adjust channel
- ☠ **Television can be on any channel for CD/DVD to play; television settings must be adjusted!!!**
- Press **PLAY**  on CD/DVD player to start CD or DVD play
 - DVD will begin to play on screen or CD sound will be heard
 - ◆ *If CD/DVD still does not play, the television settings must be changed*
- ☠ **MUST adjust settings on television for CD/DVD tape to play!!!**

*** REFER TO NEXT SET OF INSTRUCTIONS TO CHANGE TELEVISION SETTINGS**

TO CHANGE TELEVISION SETTINGS:

- ◆ *Change settings if CD/DVD does not play on screen after first set of instructions completed*
- Press **MENU** on television
 - **Menu will appear on screen**
- Press **MENU** button several times until **TV/VIDEO** is highlighted on the screen
- Press **CHANNEL +** button on television continuously until **VIDEO 1** setting is selected
- Press **PLAY**  on CD/DVD player to start CD or DVD play
 - **CD/DVD should now be playing on screen**
 - ◆ **VIDEO 1** displayed on the screen means the television is in **VIDEO 1** mode



TO CONTROL CD/DVD PLAY:

- Press **PLAY**  and **STOP**  on the CD/DVD player to control the video play

TO CONTROL TELEVISION VOLUME:

- Press **VOLUME +** and **VOLUME -** on television to adjust volume

× WHEN DONE WITH USE:

- Press **STOP**  on CD/DVD to stop disc play and press **OPEN/CLOSE**  button to eject disc
- Press **POWER** on television to turn off
- Push **ON/OFF** button on CD/DVD player down until it clicks up into the **OFF** position

☠ Must turn power off TV and CD/DVD player when finished with classroom!!!