

# ☐ TELEVISION AND VCR 📺

**\* FOR VCR USE: TV ON ANY CHANNEL AND VIDEO 1 SETTING**

**\* REMOTE COMPATIBLE WITH TV/ VCR AVAILABLE AT LIBRARY CIRCULATION DESK**

## ☐ 📺 TO BEGIN USE:

- ➔ Press **POWER** button on television to turn on
- ➔ Press **POWER** button on VCR to turn on
  - ◆ *Most televisions on campus receive no signals and are for the sole purpose of VCR use only*
- ➔ Place VHS tape into VCR slot 📺➔ 📺
- ➔ Press **CHANNEL +** and **CHANNEL -** on the television to adjust channel
- ☠ **Television can be on any channel for video to play; television settings must be adjusted!!!**
- ➔ Press **PLAY ▶** on VCR to start tape play
  - **Video will begin to play on screen**
  - ◆ *If tape still does not play, the television settings must be changed*
- ☠ **MUST adjust settings on television for VHS tape to play!!!**

**\* REFER TO NEXT SET OF INSTRUCTIONS TO CHANGE TELEVISION SETTINGS**

## ☐ TO CHANGE TELEVISION SETTINGS:

- ◆ *Change settings if tape does not play on screen after first set of instructions completed*
- ➔ Press **MENU** on television
  - **Menu will appear on screen**
- ➔ Press **MENU** button several times until **TV/VIDEO** is highlighted on the screen
- ➔ Press **CHANNEL +** button on television continuously until **VIDEO 1** setting is selected
  - **Tape should now be playing on screen**
  - ◆ *VIDEO 1 displayed on the screen means the television is in VIDEO 1 mode*

## 📺 TO CONTROL TAPE PLAY:

- ➔ Press **PLAY ▶**, **STOP ■/ EJECT ▲**, **PAUSE ||**, **REW ◀**, and **FF ▶▶** buttons on the VCR to control the video play

## 🔊 TO CONTROL TELEVISION VOLUME:

- ➔ Press **VOLUME +** and **VOLUME -** on television to adjust volume

## ✕ WHEN DONE WITH USE:

- ➔ Press **STOP ■/ EJECT ▲** button twice on VCR to stop tape play and eject tape
- ➔ Press **POWER** on television to turn off
- ➔ Press **POWER** on VCR to turn off

**☠ MUST turn power off on TV and VCR when finished with a classroom!**